# Mobile APP – "LedArt" Operating Instructions

#### 1. Software download

Scanning the QR code downloaded and installed.



## 2. Connect the control card and modify the Wi-Fi password

1). Connect the control card: Open the *LedArt* application, click the "Find device" button on the lower right corner, select the Wi-Fi signal connect to the control card (the Wi-Fi default password is 88888888). After the connection is successful, the software interface displays the name of the control card.

		-		
Border	No border >			Please select device
Background	Null >			중 W64_1558320961
Find device Not co	Find device Send	1	2	_
		$\frown$	$\frown$	
Border	No border >	(4)	(3)	
Background	Null >		Ŭ	W64_1558320961
Find device W6	4_1558320961 V4.15			
/	*			Connection is successful, scanning

Connection successful, device will be showed here

2). Change password: The initial password is very simple. For the safety of parameters and programs, According to the software prompt, change the password (8~16-digit combination of letters and numbers) and re-enter the new password and connect.

evice WiFi password is too e, there is a security risk, please W64_1558320961 Please enter your particular firm password	W64_1558320961	Connect to WLAN
firm password	e device WiFi password is too nple, there is a security risk, please	W64_1558320961
firm password	WiFi password	Please enter your passwo
	Confirm password	
Cancel OK OK	Cancel OK	ОК

change Password



#### 3. Screen Parameters Setting

Click the settings icon in the upper right corner, Select [Screen Parameter Settings] and enter the access password (password: 888) to enter the setting interface, after setting the resolution of the display. The default is the normal P10 parameter (P4.75 selects C2, the chip is 16188B). The single module selects C46, and it is necessary to adjust the scanning frequency, clock frequency, polarity setting and other parameters when the display is abnormal.

17:24	0.1K/s	ố 🕅 🗟 🗷
<	Screen settings	Sync
Width		256
Height		64
Color	Si	ngle color 🔻
Gradation		N/A 🔻

Scan type	Common P10 >
Data polarity	High Low
OE polarity	High Low
Latch polarity	High Low
Clock polarity	High Low
Data mirror	High Low

## 4. Edit and Send Programs

1. Editing program: Click the "+" icon on the right side of the main interface to add the program content, which is optional for text, picture and clock. In the program editing interface, you can set the style of the text as well as display special effects, clock styles and simple pictures.

Note: one display can only add up to two program areas.

17:26	…5.8K/s 🗑 淵旭 奈 🐵			17:26	0.8K/s 🏵 📲 🛜 💷
Ξ	新节目6	<b>છ</b>		New Program	m7 හි
2019/06, 星期二 17:26:		<b>(</b>			SPLAY
Program Clo	Text Text	+		Program Text	+
Clock style		9:00		TEXT DISPLAY	
Time zone	(UTC+08:00)Follow system	>		Arial 🔻 34 🕶 📒 ]	B I <u>U</u> ≡ >
Font size	20px	>	0	Animation effects	Display static >
Date	YYYY/MM/DD	>		Speed	10 🔻
Week	星期一	>		Hold	3S 🔻
Time	HH:mm:ss	>		Immediate clear	
Display mode	Multi-line show	>		Border	
Interval	3	•		Background	Null >
Find device	W64_1558319133 V4.15	d		Find device W64_1558319 V4.15	133 Send

2. Sending programs: After edited, click the "Send" button in the lower right corner of the software to update the programs.

