


VX1000

All-in-One Controller

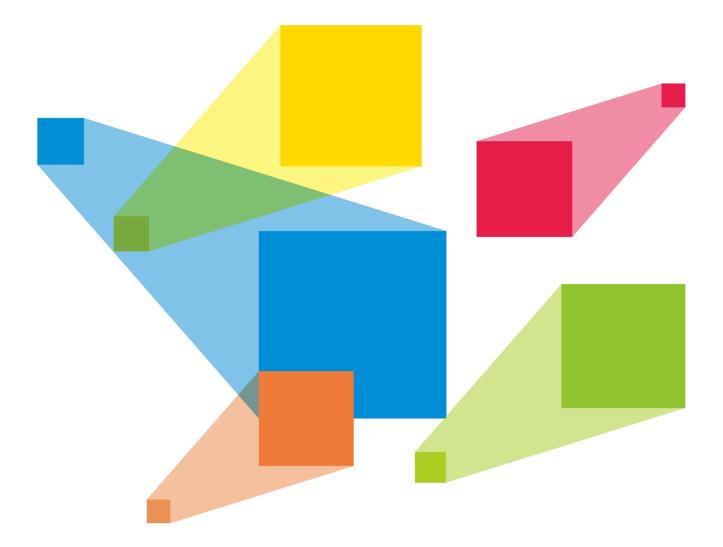

Specifications

Document Version	Release Date	Description	
V1.4.0	2023-05-06	Updated the rear panel picture.	
V1.3.1	2022-10-24	Optimized the descriptions of the DVI and HDMI connectors. Added descriptions for optical module selection.	
V1.3.0	2022-07-30	Updated the rear panel picture.	
V1.2.0	2022-02-18	Updated the certifications.Added the Notes and Cautions section.	
V1.1.0	2021-09-16	Updated the packaging descriptions.	
V1.0.0	2021-05-30	First release	

Change History

Introduction

The VX1000 is NovaStar's new all-in-one controller that integrates video processing and video control into one box. It features 10 Ethernet ports and supports video controller, fiber converter and Bypass working modes. A VX1000 unit can drive up to 6.5 million pixels, with the maximum output width and height up to 10,240 pixels and 8192 pixels, respectively, which is ideal for ultra-wide and ultra-high LED screen applications.

The VX1000 is capable of receiving a variety of video signals and processing high-resolution 4K×1K@60Hz images. In addition, the device features stepless output scaling, low latency, 3D, pixel-level brightness and chroma calibration and more, to present you with an excellent image display experience.

What's more, the VX1000 can work with NovaStar's supreme software NovaLCT and V-Can to greatly facilitate your in-field operations and control, such as screen configuration, Ethernet port backup settings, layer management, preset management and firmware update.

Thanks to its powerful video processing and sending capabilities and other outstanding features, the VX1000 can be widely used in applications such as medium and high-end rental, stage control systems and fine-pitch LED screens.

Certifications

CE, UL&CUL, IC, FCC, EAC, UKCA, KC, RCM, CB, RoHS

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

Features

- Input connectors
 - 1x HDMI 1.4 (IN & LOOP)
 - 1x HDMI 1.4
 - 1x DVI (IN & LOOP)
 - 1x DVI
 - 1x 3G-SDI (IN & LOOP)
 - 1x 10G optical fiber port (OPT1)
- Output connectors
 - 10x Gigabit Ethernet ports

A single device unit drives up to 6.5 million pixels, with a maximum width of 10,240 pixels and a maximum height of 8192 pixels.

- 2x Fiber outputs

OPT 1 copies the output on 10 Ethernet ports.

OPT 2 copies or backs up the output on 10 Ethernet ports.

- 1x HDMI 1.3

For monitoring or video output

Self-adaptive OPT 1 for either video input or sending card output

Thanks to the self-adaptive design, OPT 1 can be used as either an input or output connector, depending on its connected device.



- Audio input and output
 - Audio input accompanied with HDMI input source
 - Audio output via a multifunction card
 - Output volume adjustment supported
- Low latency

Reduce the delay from the input to receiving card to 20 lines when the low latency function and Bypass mode are both enabled.

- 3x layers
 - Adjustable layer size and position
 - Adjustable layer priority
- Output synchronization

An internal input source or external Genlock can be used as the sync source to ensure the output images of all cascaded units in sync.

- Powerful video processing
 - Based on SuperView III image quality processing technologies to provide stepless output scaling.
 - One-click full screen display
 - Free input cropping
- Easy preset saving and loading
 - Up to 10 user-defined presets supported
 - Load a preset by simply pressing one button
- Multiple kinds of hot backup
 - Backup between devices

Appearance

Front Panel						
	LED Display Video Controller		CONTROL MAIN PIP1 PIP2 BCALE	HAPUTS HAPUTS HOMIT 2 3 4 501 00711 00712 4 9 4 4 4 4 4 4 4 4 4 4 4 4 4	FUNCTION PRESET 5 TEST FREEX 0 FM	
		2 3	4	5	6	

No.	Area	Function	
1	LCD screen	Display the device status, menus, submenus and messages.	
2	Knob	 Rotate the knob to select a menu item or adjust the parameter value. Press the knob to confirm the setting or operation.	
3	ESC button	Exit the current menu or cancel an operation.	
4	Control area	 Open or close a layer (main layer and PIP layers), and show the layer status. Status LEDs: On (blue): The layer is opened. Flashing (blue): The layer is being edited. On (white): The layer is closed. 	

- Backup between Ethernet ports
- Backup between input sources
- Mosaic input source supported

The mosaic source is composed of several input connectors of the same type.

- Up to 4 units cascaded for image mosaic
 - Three working modes
 - Video Controller
 - Fiber Converter
 - Bypass
- All-round color adjustment

Input source and LED screen color adjustment supported, including brightness, contrast, saturation, hue and Gamma

3D function

Work with the EMT200 3D emitter and matched 3D glasses to present a 3D visual experience.

• Pixel level brightness and chroma calibration

Work with NovaLCT and NovaStar calibration software to support brightness and chroma calibration on each LED, which can effectively remove color discrepancies and greatly improve LED display brightness and chroma consistency, allowing for better image quality.

Multiple operation modes

Control the device as you wish via V-Can, NovaLCT or device front panel knob and buttons.

No.	Area	Function	
		 SCALE: A shortcut button for the full screen function. Press the button to make the layer of the lowest priority fill the entire screen. 	
		Status LEDs:	
		 On (blue): Full screen scaling is turned on. 	
		 On (white): Full screen scaling is turned off. 	
5	Input source buttons	Show the input source status and switch the layer input source.	
		Status LEDs:	
		On (blue): An input source is accessed.	
		• Flashing (blue): The input source is not accessed but used by the layer.	
		• On (white): The input source is not accessed or the input source is abnormal.	
		Notes:	
		 When a 4K video source is connected to OPT 1, OPT 1-1 has a signal but OPT 1-2 does not have a signal. 	
		 When two 2K video sources are connected to OPT 1, OPT 1-1 and OPT 1-2 both have a 2K signal. 	
6	Shortcut function buttons	PRESET: Access the preset settings menu.	
		TEST: Access the test pattern menu.	
		• Freeze: Freeze the output image.	
		FN: A customizable button	

Note:

Hold down the knob and **ESC** button simultaneously for 3s or longer to lock or unlock the front panel buttons.

Rear Panel



Input Connectors				
Connector	Qty	Description		
3G-SDI	1	• ST-424 (3G), ST-292 (HD) and ST-259 (SD) standard video inputs supported		
		 Max. input resolution: 1920×1080@60Hz 		
		 Deinterlacing processing supported 		
		3G-SDI loop output supported		
		 DOES NOT support input resolution and bit depth settings. 		
HDMI 1.4	2	• Max. input resolution: 3840×1080@60Hz or 3840×2160@30Hz		
		HDCP 1.4 compliant		
		Mosaic of two HDMI 1.4 inputs supported		
		Custom resolutions supported		
		 Max. width: 4092 pixels (4092×1136@60Hz) 		
		 Max. height: 3981 pixels (1060×3981@60Hz) 		
		 Loop output supported on HDMI 1.4 1 		
		 DOES NOT support interlaced signal inputs 		
DVI (HDMI 1.4)	2	• Max. input resolution: 3840×1080@60Hz or 3840×2160@30Hz		

		HDCP 1.4 compliant	
		 Custom resolutions supported 	
		 Max. width: 4092 pixels (4092 	
		 Max. height: 3981 pixels (1060) 	
		 Mosaic of two DVI inputs supported 	3
		 Loop output supported on DVI 1 	
		 DOES NOT support interlaced sign 	al inputs
Output Connectors		Γ	
Connector	Qty	Description	
Ethernet ports	10	Gigabit Ethernet ports	
		 Max. loading capacity: 6.5 million p 	ixels
		 Max. width: 10,240 pixels 	
		 Max. height: 8192 pixels 	
			output. When you use a multifunction onnect the card to Ethernet port 1 or 2.
		Status LEDs:	
		• The top left one indicates the conne	ection status.
		 On: The port is well connected 	
		•	connected, such as loose connection.
		 Off: The port is not connected. 	
		 The top right one indicates the communication status. On: The Ethernet cable is short-circuited. 	
			is good and data is being transmitted.
		 Off: No data transmission 	
HDMI 1.3	1	 Support monitor and video output n 	nodes.
		 The output resolution is adjustable. 	
Optical Fiber Ports			
Connector	Qty	Description	
OPT	2	10G optical fiber ports	
		OPT 1: Self-adaptive, either for vide	eo input or for output
		 When the device is connected as an output connector. 	with a fiber converter, the port is used
		 When the device is connected as an input connector. 	with a video processor, the port is used
		 Max. capacity: 1x 4K×1K@60 	Hz or 2x 2K×1K@60Hz video inputs
		OPT 2: For output only, with copy a	and backup modes
		OPT 2 copies or backs up the outp	ut on 10 Ethernet ports.
		Single mode OPT module	OPT fiber selection:
		description:	Model: OS1/OS2
		Hot swappable Transmission rate: 0.05 Chit/a to	Transmission mode: Single-mode
		 Transmission rate: 9.95 Gbit/s to 11.3 Gbit/s 	twin-core • Cable diameter: 9/125 μm
		 Wavelength: 1310 nm 	 Connector type: LC
		 Transmission distance: 10 km 	 Insertion loss: ≤ 0.3 dB
			 Return loss: ≥ 45 dB
	1		




Multi-mode OPT module description:	OPT fiber selection:
 Hot swappable 	Model: OM3/OM4
 Transmission rate: 9.95 Gbit/s to 11.3 Gbit/s 	 Transmission mode: Multi-mode twin-core
 Wavelength: 850 nm 	 Cable diameter: 50/125 μm
 Transmission distance: 300 m 	 Connector type: LC
	 Insertion loss: ≤ 0.2 dB
	● Return loss: ≥ 45 dB

- Off: The port is not connected. • The top right one indicates the communication status. - On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmit - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.	Control Connectors			
Status LEDs: • The top left one indicates the connection status. - On: The port is well connected. - Flashing: The port is not well connected, such as loose connection - Off: The port is not connected. • The top right one indicates the communication status. - On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmit - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-B): • Inv: Accept bi-level and tri-level signals.	Connector	Qty	Description	
• The top left one indicates the connection status. • On: The port is well connected. • Flashing: The port is not well connected, such as loose connection • Off: The port is not connected. • The top right one indicates the communication status. • On: The Ethernet cable is short-circuited. • Flashing: The communication is good and data is being transmit • Off: No data transmission USB 2 • USB 2.0 (Type-B): • Connect to the control PC. • Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-B): • Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.	ETHERNET	1	Connect to the control PC or router.	
- On: The port is well connected. - Flashing: The port is not well connected, such as loose connection. - Off: The port is not connected. • The top right one indicates the communication status. - On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmither - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-B): • IN: Accept the sync signal.			Status LEDs:	
- Flashing: The port is not well connected, such as loose connectine - Off: The port is not connected. • The top right one indicates the communication status. - On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmittion - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-B): • Instance to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal			 The top left one indicates the connection status. 	
- Off: The port is not connected. • The top right one indicates the communication status. - On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmit - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.			 On: The port is well connected. 	
- On: The Ethernet cable is short-circuited. - Flashing: The communication is good and data is being transmit - Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-B): • IN: Accepts bi-level and tri-level signals. • IN: Accept the sync signal.			Flashing: The port is not well connected, such as loose connection.Off: The port is not connected.	
- Flashing: The communication is good and data is being transmitting - USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading			 The top right one indicates the communication status. 	
- Off: No data transmission USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading				
USB 2 • USB 2.0 (Type-B): - Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.				
- Connect to the control PC. - Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.				
- Input connector for device cascading • USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.	USB	2		
• USB 2.0 (Type-A): Output connector for device cascading GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.				
GENLOCK IN-LOOP 1 Connect to an external sync signal. Accepts bi-level and tri-level signals. • IN: Accept the sync signal.				
Accepts bi-level and tri-level signals. • IN: Accept the sync signal.			• USB 2.0 (Type-A): Output connector for device cascading	
• IN: Accept the sync signal.	GENLOCK IN-LOOP	1	Connect to an external sync signal.	
			Accepts bi-level and tri-level signals.	
• LOOP: Loop the sync signal.			• IN: Accept the sync signal.	
			• LOOP: Loop the sync signal.	
LIGHT SENSOR 1 Connect to a light sensor to collect the ambient brightness, allowing automatic screen brightness adjustment.	LIGHT SENSOR	1	Connect to a light sensor to collect the ambient brightness, allowing for automatic screen brightness adjustment.	

Note:

Only the main layer can use the mosaic source. When the main layer uses the mosaic source, PIP 1 and 2 cannot be opened.


Applications

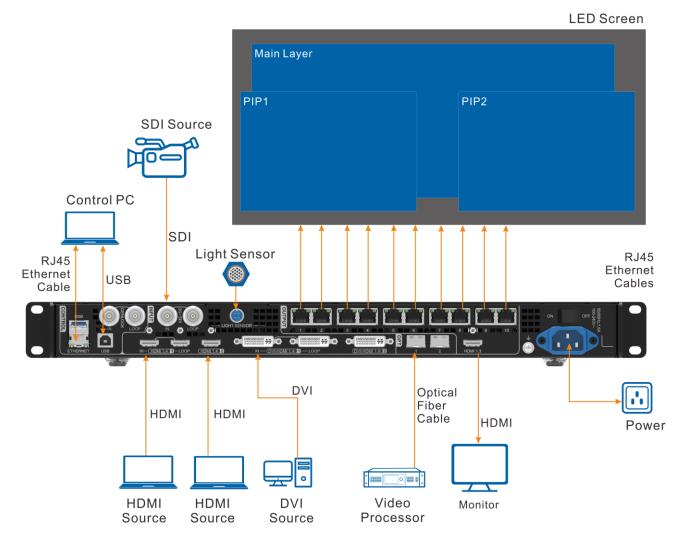

Dimensions

The VX1000 provides the **flight case** or **carton** packaging. This section provides the dimensions of the device, flight case and carton, respectively.

Device

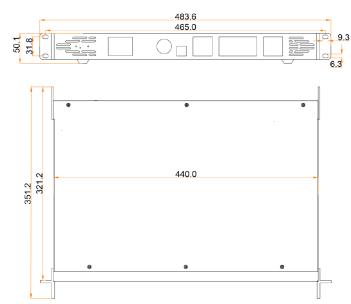


Tolerance: ±0.3

Unit: mm

Packaging

Flight Case

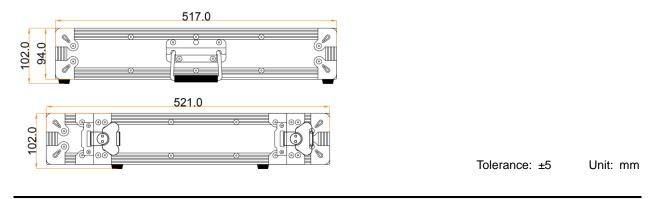

Note:

For the detailed flight case drawings, please contact NovaStar's technical support staff.

Carton





Specifications

Electrical Parameters	Power connector	100–240V~, 1.6A, 50/60Hz		
Parameters Rated power consumption		28 W		
Operating Environment	Temperature	0°C to 45°C		
Environment	Humidity	20% RH to 90% RH, non-condensing		
Storage Environment	Temperature	–20°C to +70°C		
Environment	Humidity	10% RH to 95% RH, non-condensing		
Physical	Dimensions	483.6 mm × 351.2 mm × 50.1 mm		
Specifications Net weight		4 kg		
Packing Information	Accessories	Flight Case	Carton	
Information		1x Power cord	1x Power cord	
		1x HDMI to DVI cable	1x HDMI to DVI cable	
		1x USB cable	1x USB cable	
		1x Ethernet cable	1x Ethernet cable	
		1x HDMI cable	1x HDMI cable	
		1x Quick Start Guide	1x Quick Start Guide	
		1x Certificate of Approval	1x Certificate of Approval	
		1x DAC cable	1x Safety Manual	
			1x Customer Letter	
	Packing size	521.0 mm × 517.0 mm × 102.0 mm	565.0 mm × 175.0 mm × 450.0 mm	
Gross weight		10.4 kg	6.8 kg	
Noise Level (typ	bical at 25°C/77°F)	45 dB (A)		

Video Source Features

Input Connectors	Bit Depth		Max. Input Resolution
• HDMI 1.4	8-bit RGB 4:4:4 YCbCr 4:4:4 YCbCr 4:2:2		3840×1080@60Hz (Standard)
 DVI (HDMI 1.4) OPT 1 			4092×1136@60Hz (Custom) 4096×1080@60Hz (Forced)
		YCbCr 4:2:0	Not supported
	10-bit		Not supported
	12-bit	Not supported	
3G-SDI	 Max. input resolution: 1920×1080@60Hz DOES NOT support input resolution and bit depth settings. Supports ST-424 (3G), ST-292 (HD) and ST-259 (SD) standard video inputs. 		

Notes and Cautions

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Others

This is Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Copyright © 2023 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVASTAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech

Technical support support@novastar.tech